


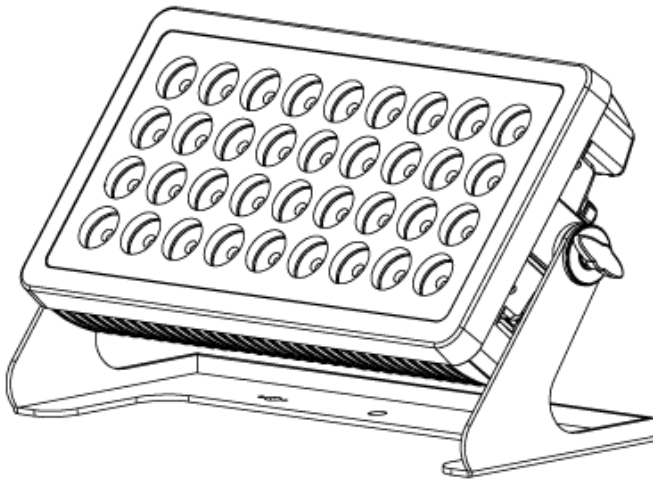

HEX36

User Manual



www.showtech.com.au

SHOWPRO



Table of Contents

1. Safety instructions.....	3
1.1 Power Connection	4
1.2 Overhead Rigging	4
1.3 DMX Connection	6
1.4 Cleaning and Maintenance	6
2. Menu Navigation	7
3. DMX Allocation.....	9
4. Technical Specifications	12



HEX36

1. Safety Instructions

FOR SAFE AND EFFICIENT OPERATION

Be careful with heat and extreme temperature.

Avoid exposing it to direct rays of sun.

Operate only between 41°F/5°C and 95°F/35°C.

Keep away from humidity, water and dust.

Do not place the unit in a location with high humidity or lots of dust.

It is ideal to use the Hercules away from such equipment:

Transformer motor, tuner, TV set and amplifier.

Avoid placing on un-stable location

Select a level and stable location to avoid vibration.

Do not use chemicals or volatile liquids for cleaning

Use a dry cloth to wipe off dust, or a wet soft cloth for stubborn dirt.

NO USER SERVICABLE PARTS INSIDE.

If unit is out of service, please contact your point of purchase.

If any troubles arise, remove the power plug and contact your ShowPro representative for repair. Do not open the machine by yourself, it might result a danger of electric shock.

Take care with the power cable. Never pull the power cable to remove the plug from the receptacle, be sure to hold the plug.

When not using the unit for an extended period of time be sure to disconnect the plug from the receptacle.

SHOWPRO



HEX36

1.1 Power Connection

AC Power This product has an auto-ranging power supply that can work with an input voltage range of 100–240 VAC

AC Plug

Connection	Wire
AC Live	Brown
AC Neutral	Blue
AC Ground	Green/Yellow

1.2 Overhead Rigging

This item must be built in a way that it can hold 10 times more of its weight for 1 hour without causing any damage. The installation must be secured with a secondary safety attachment. The Safety attachment has to be constructed in a way that no part of the installation can fall. When rigging, de-rigging or servicing the fixture ensure that the area below is secure. Before putting the device into operation, the installation must be approved by an expert. The operator has to make sure that safety-relating and machine-technical installations are approved by a skilled person once a year.

IMPORTANT! OVERHEAD RIGGING REQUIRES EXTENSIVE EXPERIENCE.

Including (but not limited to) calculating working load limits, installation material being used, and periodic safety inspection of all installation material and the projector. If you lack these qualifications, do not attempt the installations yourself, but instead use a professional structural rigger. Improper installation can result in bodily injury and/or damage to property.

Use only professional trussing system if the item is to be lowered from the ceiling or high joists. Never let the device swing freely in a room.

SHOWPRO



HEX36

CAUTION: Overhead Items may cause serious injuries when not installed correctly!! If there is concern about the safety DO NOT INSTALL the device.

DANGER OF FIRE!

When installing the device, make sure there is no highly-flammable material (decoration articles, etc.) within a distance of min. 0.5m.

Mount the projector with the mounting bracket to your trussing system using an appropriate clamp.

For overhead use, always install a rated safety - wire that can hold at least 10 times the weight of the fixture. You must only use rated safety – wire with quick links with screw cap. Pull the rated safety - wire through the hole in the mounting bracket and over the trussing system or a safe fixation spot. Insert the end in the quick link and tighten the safety screw. The maximum drop distance must never exceed 20cm
A safety - wire which has already held the strain of a fall or which is defective must not be used again.

IMPORTANT!

Before taking into operation for the first time, the installation has to be approved by an expert.



HEX36

1.3 DMX Connection

DMX Linking the HEX36 will work with a DMX controller using a 5-pin DMX serial connection.

DMX Connection the HEX36 uses IP Rated 5-pin DMX data connections for its DMX personalities:

6 Ch, 8 Ch, 12Ch. See the User Manual for information about connecting and configuring the product for DMX operation.

1.4 Cleaning and Maintenance

Please make sure that safety-relating and machine-technical installations are inspected by a skilled person once a year.

1. Make sure before installing that all screws are tightly connected and not corroded.
2. There must be no deformations on the housings, fixations and installations spots
3. Any defects on the electronics, power cables or housing must be repaired for safe use.

If the exterior of the unit is going to be cleaned, please use moist, lint free cloths. Never use alcohol or solvents.

The Cooling fan must be cleaned monthly and check to ensure it is free of obstructions.

To clean the interior of the device please use a vacuum cleaner or an air jet, however we recommend cleaning the lenses weekly to ensure the best output from your unit.



HEX36

2.0 Menu Navigation

Menu			
1	6 - Channel	d1 d512	(Default 12CH, d 1)
2	8 - Channel	d1 d512	
3	12 - Channel	d1 d512	
4	C --	C1 C2 C3 C4 C5 **** **** C60 C61 C62 C63	Default : C63
5	P --	P1 P2 P3 P4 P5	(Default : P1)
6	S --	S--1 S100	(Default : S100) 1
7	U --	RED	0 (Default : RGBAWP=255)

255
SHOWPRO



HEX36

GREEN	0
	255
BLUE	0
	255
AMBER	0
	255
WHITE	0
	255
UV	0
	255

8	Dimmer	OFF	Dimmer speed OFF: (Default : OFF)
		DIM1	Dimmer speed Mode1(Fast)
		DIM2	Dimmer speed Mode1(Middle)
		DIM3	Dimmer speed Mode1(Slow)

9	Temperature	32
----------	-------------	----

10	Password	ON	(Default : ON)
		OFF	

If setting pass word to "On", need to press "UP, DOWN, UP, DOWN, ENTER" to release;
if press wrong, pls press enter to input again.



HEX36

3.0 DMX Allocation

6-CH	Function	Value	Setting
1	Red	000-255	0~100%
2	Green	000-255	0~100%
3	Blue	000-255	0~100%
4	Amber	000-255	0~100%
5	White	000-255	0~100%
6	UV	000-255	0~100%

8-CH	Function	Value	Setting
1	Dimmer	000-255	0~100%
2	Red	000-255	0~100%
3	Green	000-255	0~100%
4	Blue	000-255	0~100%
5	Amber	000-255	0~100%
6	White	000-255	0~100%
7	UV	000-255	0~100%
8	Strobe	000-010 011-255	NO Function Strobe slow to fast

12CH	Function	Value	Setting
1	Dimmer	000-255	0~100%
2	Red	000-255	0~100%
3	Green	000-255	0~100%
4	Blue	000-255	0~100%
5	Amber	000-255	0~100%
6	White	000-255	0~100%
7	UV	000-255	0~100%
8	Strobe	000-010	NO Function

SHOWPRO



HEX36

9

Manual Colour + Colour Temperature

- 011-255 Strobe slow to fast
- 000-010 No Function
- 011-030 R 100%, G 0~100%, B 0%
- 031-050 R 100%~0%, G 100%, B 0%
- 051-070 R 0%, G 100%, B 0~100%
- 071-090 R 0% G 100%~0% B 100%
- 091-110 R 0%~100% G 0% B 100%
- 111-130 R 100% G 0% B 100%~0%
- 131-150 R 100% G 0%~100% B 0%~100%
- 151-170 R 100%~0% G 100%~0% B 100%
- 171-200 R 100% G 100% B 100% A100%
- 201-205 Colour temperature1
- 206-210 Colour temperature2
- 211-215 Colour temperature3
- 216-220 Colour temperature4
- 221-225 Colour temperature5
- 226-230 Colour temperature6
- 231-235 Colour temperature7
- 236-240 Colour temperature8
- 241-245 Colour temperature9
- 246-250 Colour temperature10
- 251-255 Colour temperature11

10

Function

Value

Setting

Auto

Sound Programs

- 000-051 No Function
- 052-101 Auto Program 1
- 102-152 Auto Program 2
- 153-203 Auto Program 3
- 204-254 Auto Program 4
- 255 Auto Program 0 (Auto1-5)

SHOWPRO



HEX36

11	Function	Value	Setting
	Auto Speed	000-255	Speed Slow to Fast

12	Function	Value	Setting
	Dim Mode	000-051	Preset dimmer speed from display menu
		052-101	Dimmer speed mode off
		102-152	Dimmer speed mode1 (fast speed)
		153-203	Dimmer speed mode2 (middle speed)
		204-255	Dimmer speed mode3 (slow speed)

SHOWPRO



HEX36

4.0 Technical Specifications

OPTICS

LED Specification	12W RGBWAUV 6 in 1 LEDs
LED quantity	36
Field Angle	22°
Beam Angle	35 °
Output	1699 lux @ 5 meters

Control

Control method	DMX
WDMX Compatibility	N/A
DMX Channels	6,8 and 12
Dimming Curves	4 Modes
Dimming Resolution	16 bit
Data Connections	5 Pin IP Rated connectors
Menu	Touch Screen

Electrical

Power	240V IP Rated connectors
Battery Specifications	N/A
Working Hours	N/A
Charging hours	N/A
Charging	N/A
Charging during use	N/A
Input Voltage AC	110V-240V AC 50/60 Hz auto-ranging
Power Consumption	450W
Fuse	N/A

SHOWPRO



HEX36

Physical

Weight	14.3Kg
Size	593x303x212
Cooling System	Fan-free convection cooled
IP Rating	IP64

SHOWPRO